




Lay the chain out straight so the inside side chain are closest to the tire. Be sure the side hooks are facing up. Check the chain and eliminate any twists.



Grasp the side chain nearest the tire by the center and drape over the tire. Tuck end with attachments of the chain under tire tread. Move vehicle slowly in the direction away from the attachments until the attachments are rotated to the 5 o'clock position. Connect the inner side chain into the quick hook.

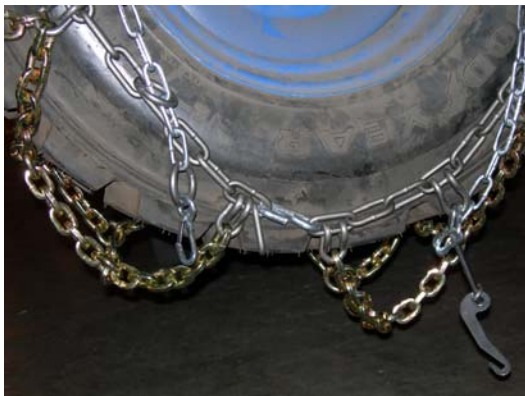

Fasten the outside quick link into side chain. You may need to squeeze the cross chain hook as shown to insure a snug fit.



Pull tension chain tight and hook fastener through chain as shown



Secure tension chain fastener.



Weave excess chain and secure with clip.